Window Bar Features

- Extra Strong Welded Tubular Steel Construction
- Rust Resistant, Long Lasting, Durable Powder Coat Finish
- Accessories Available For Every Installation(Sold Separately)
- Foot Operated Safety Release Available (Sold Separately)
  (Not approved for New York city use)
- REQUIRED BY FIRE CODE FOR DESIGNATED EGRESS REGULATIONS

How to Buy Window Bars

- Please refer to measuring instructions below
- Determine the hardware required to install window bar

Ventana Características Bar

- Construcción de acero tubular soldada con autógena extrafuerte
- Moho resistente, final duradero, durable de la capa del polvo
- Accesorios disponibles para cada instalación(Vendido por separado)
- Anzamiento de mando por pedal de seguridad disponible(Vendido por separado)
  (No aprobado para su uso la ciudad de Nueva York)
- REQUERIDO POR FIRE CODE PARA LAS REGULACIONES SEÑALADAS DE LA A SLIDA

Cómo Comprar Barrotes De La Ventana

- Refiera por favor a las instrucciones de medición abajo
- Determinar el hardware necesario para instalar la barra de la ventana

Installation Instructions

1. WIDTH: Note Diagram 1
   Determine if installation will be inside or outside of outside window frame or building surface.
   To mount within the inside surface, window bar height must be less than inside diameter dimensions.

2. Height: Note Diagram 2
   Determine best height requirements based on appearance and desired security coverage. To mount within the inside surface, window bar height must be less than inside diameter dimensions.

3. Installations: Window bars need mounting brackets installed in horizontal tubes before installing in desired location. Use outside mounting brackets for installing outside of the window frame. Use inside mounting brackets for installing inside of the window frame. If you are connecting two window bars together for wide expanse use connector pins.

Note: Mounting brackets are required to be fully seated within all horizontal tube openings to eliminate any lateral movement. Any spacing developed between the vertical bars and seated mounting brackets must not exceed 4 3/4" inches.

Diagram 1
Width

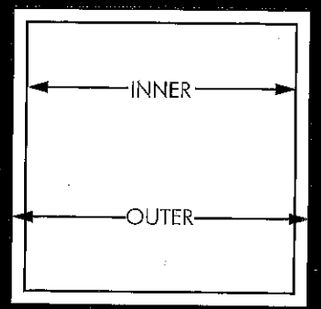

Diagram 2
Height

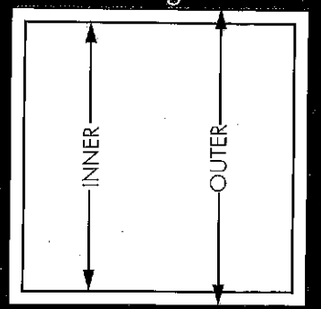

1. ANCHURA: Observe el diagrama 1
   Determinar si la instalación se encuentre dentro o fuera del marco de la ventana exterior o superficie del edificio. Para montar en la superficie interior, altura de la ventana de barras debe ser menos que dentro de las dimensiones de diámetro.

2. Altura: Observe el diagrama 2
   Determinar la mejor altura de los requisitos basados en la apariencia y la cobertura de la seguridad deseada. Para montar en la superficie interior, altura de la ventana de barras debe ser menos que dentro de las dimensiones de diámetro.

3. Instalaciones: bares ventana necesidad de soportes de montaje instalado en tubos horizontales antes de instalar en el lugar deseado. Su uso fuera de los soportes de montaje para la instalación fuera del marco de la ventana. Uso dentro de los soportes de montaje para la instalación en el interior del marco de la ventana. Si va a conectar dos barrotes de la ventana, junto a los pernos amplia extensión conector de uso.

Nota: Los soportes de montaje se requieren para ser asentados completamente dentro de todas las aberturas horizontales del tubo para eliminar cualquier movimiento lateral. Ningún espaciamiento desarrollado entre las barras verticales y los soportes de montaje asentados no debe exceder de 4 3/4" las pulgadas.